


16" X 14" X 7.37" ENCLOSURE

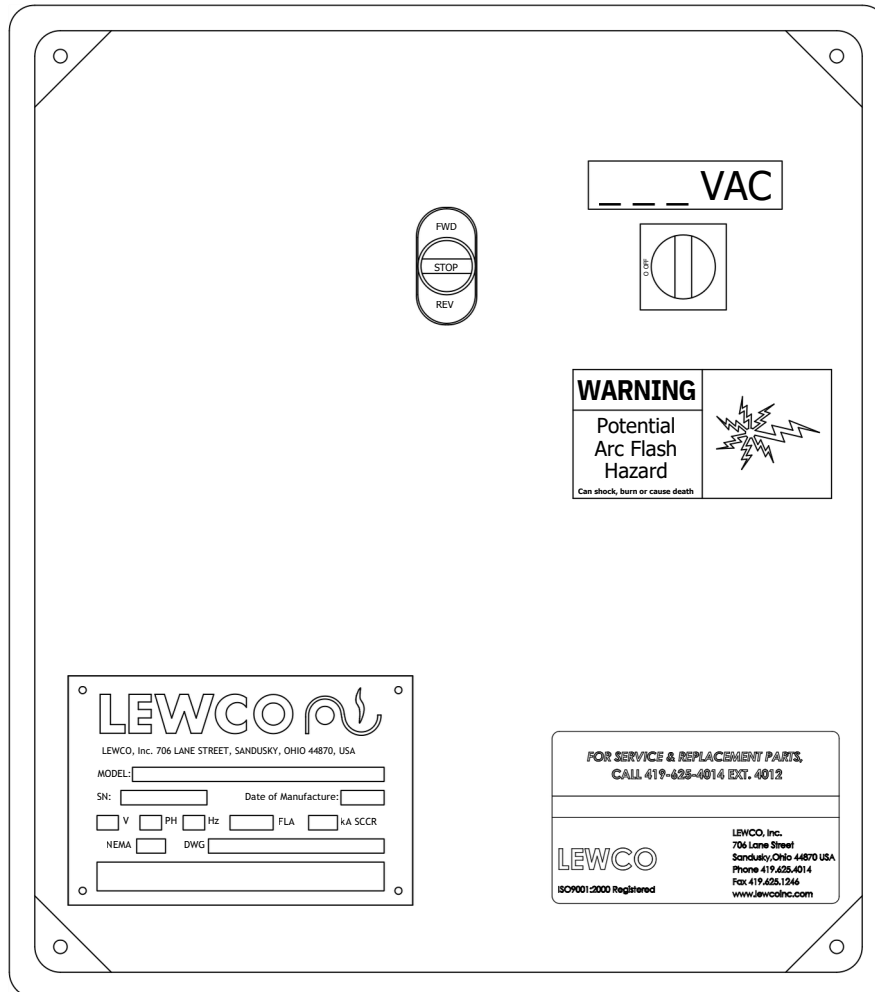

NOTE: REFER TO NAMEPLATE FOR ELECTRICAL PANEL MODEL

SINGLE PHASE UNITS		
ELECTRICAL PANEL	FLA	DISCONNECT
120 VAC / 1 PHASE		
ELS000X-.50-SV01	8	25 AMP
ELS000X-.75-SV01	16	25 AMP
ELS000X-1.50-SV01	22	25 AMP
208 VAC / 1 PHASE		
ELS000X-.50-SV02	5	25 AMP
ELS000X-.75-SV02	8	25 AMP
ELS000X-1.50-SV02	14	25 AMP
ELS000X-2.00-SV02	14	25 AMP
240 VAC / 1 PHASE		
ELS000X-.50-SV04	5	25 AMP
ELS000X-.75-SV04	8	25 AMP
ELS000X-1.00-SV04	10	25 AMP
ELS000X-1.50-SV04	14	25 AMP
ELS000X-2.00-SV04	14	25 AMP

THREE PHASE UNITS		
ELECTRICAL PANEL	FLA	DISCONNECT
208 VAC / 3 PHASE		
ELS000X-.50-SV03	4	60 AMP
ELS000X-.75-SV03	7	60 AMP
ELS000X-1.00-SV03	7	60 AMP
ELS000X-1.50-SV03	10	60 AMP
ELS000X-2.00-SV03	10	60 AMP
240 VAC / 3 PHASE		
ELS000X-.50-SV05	4	60 AMP
ELS000X-.75-SV05	7	60 AMP
ELS000X-1.00-SV05	7	60 AMP
ELS000X-1.50-SV05	10	60 AMP
ELS000X-2.00-SV05	10	60 AMP
480 VAC / 3 PHASE		
ELS000X-.50-SV09	2	60 AMP
ELS000X-.75-SV09	4	60 AMP
ELS000X-1.00-SV09	4	60 AMP
ELS000X-1.50-SV09	6	60 AMP
ELS000X-2.00-SV09	6	60 AMP
ELS000X-3.00-SV09	8	60 AMP
ELS000X-5.00-SV09	12	60 AMP
575 VAC / 3 PHASE		
ELS000X-.50-SV11	2	25 AMP
ELS000X-1.00-SV11	2	25 AMP
ELS000X-2.00-SV11	3	25 AMP
ELS000X-3.00-SV11	5	25 AMP
ELS000X-5.00-SV11	7	25 AMP

MOTOR WIRE SIZING	
CIRCUIT BREAKER SIZE	WIRE SIZE
0-20A	#12 THHN
20A+	#10 THHN

MODEL: ELS0005
DESCRIPTION: CONTROLS, CONV, MOTOR START, REV, VAR SPEED

LEWCO, INC. IS COMMITTED TO CONTINUOUS IMPROVEMENT AND RESERVES THE RIGHT TO CHANGE DESIGNS AND SPECIFICATIONS WITHOUT NOTICE.
THIS DRAWING MUST NOT BE COPIED, REPRODUCED OR USED FOR ANY PURPOSE WITHOUT THE WRITTEN CONSENT OF LEWCO, INC. ALL RIGHTS RESERVED.